

Backlit Remote to TV Programming

PROGRAMMING REMOTE TO TV:

1) Find the digit of your TV brand key

1 Insignia	6 Sanyo
2 LG	7 Sharp
3 Panasonic	8 Sony
4 Philips/Magnavox	9 Vizio
5 Samsung	0 Westinghouse

If your TV isn't one of these, go to step 6 (see back)

2) Switch on device (TV)

Press the TV button on the upper left of the remote control

3) Press and hold the remotes SETUP button until the TV button blinks twice
(Setup button is right below the TV button)

4) Press and release the TV button, it should stay lit

5) Find the digit of your TV brand key

1 Insignia	6 Sanyo
2 LG	7 Sharp
3 Panasonic	8 Sony
4 Philips/Magnavox	9 Vizio
5 Samsung	0 Westinghouse

Press and hold down the digit key until your device turns OFF
The TV button will blink twice

Press the STB (Set Top Box) button on top right of remote

Setup is complete

*Go to Programming The Power Button to Control TV & Set Top Box (STB)
See back page*

If your TV wasn't on the list:

- 6) Switch on device (TV)
Press the TV button on the upper left of the remote control
- 7) Press and hold the remotes SETUP button until the TV button blinks twice
(Setup button right below the TV button)
- 8) Press 9 9 1 - the TV button will blink twice
- 9) Aim the remote at the TV and press POWER
- 10) Press CHANNEL UP repeatedly until the TV is switched off
(Channel up button is below the blue button)
- 11) Press the remotes SETUP button to store the code
The TV button blinks twice
Your remote will be programmed to your TV
- 12) Press the STB (Set Top Box) button on top right of the remote



PROGRAMMING THE POWER BUTTON TO CONTROL TV & SET TOP BOX (STB):

- 1) Press the remotes SETUP button until the STB (Set Top Box) button blinks twice
- 2) Press 9 9 5
- 3) Press POWER button
- 4) Press STB (Set Top Box) button
- 5) Press TV button
- 6) Press the remotes SETUP button until the TV button blinks twice

Setup is complete