

## ***Backlit Remote to TV programming***

- 1. Find the digit of your TV brand key.**
  - a. 1 Insignia, 2 LG, 3 Panasonic, 4 Philips/Magnavox, 5 Samsung, 6 Sanyo, 7 Sharp, 8 Sony, 9 Vizio, 0 Westinghouse**
  - b. If your TV isn't one of these go to step 6***
  
- 2. Switch on device (TV). Press the TV button on the upper left of the remote.**
- 3. Press and hold the remotes SETUP button until the TV button blinks twice.**
- 4. Press and release TV key, it should stay lit.**
- 5. Find the digit of your brand key.**
  - a. 1 Insignia, 2 LG, 3 Panasonic, 4 Philips/Magnavox, 5 Samsung, 6 Sanyo, 7 Sharp, 8 Sony, 9 Vizio, 0 Westinghouse**
  - b. Press and hold down the digit key until your device turns OFF and the TV button will blink twice.**
  - c. Press the STB button on top right of remote. *Setup should be complete. Go to programming the remote to shut off both TV and Set Top Box on back page.***
  
- 6. If your TV wasn't listed above**
- 7. Switch on device (TV). Press the TV button on the upper left of the remote.**
- 8. Press and hold the remotes SETUP button until the TV button blinks twice.**
- 9. Press 9 9 1. The TV key blinks twice.**

10. Aim the remote at the TV and press **POWER**.
11. Press **CHANNEL UP** repeatedly until the TV is switched off.
12. Press the remotes **SETUP** button to store the code. The TV button blinks twice. Your remote should be programmed to your TV.
13. Press the **STB** button on top right of remote.

*To program the power button to control the TV and Set Top Box:*

1. Press the remotes **SETUP** button until the **STB** button blinks twice.
2. Press **9 9 5**.
3. Press **POWER**.
4. Press **STB**.
5. Press **TV**.
6. Press the remotes **SETUP** button until the **TV** button blinks twice.
7. Setup should be complete